



# Seat Installation

**Fig.1**



Make a loop in the nose strap about 6" long. Be sure to tuck the end of the strap through the buckle to secure it.


Drop the loop over the nose support on the seat frame, as shown in figs.1, 2 and 3. Make sure the point where the loop material is sewn to the base material is sitting on top of the rubber plug in the end of the nose support, Fig 4.

Insert the top of the seat frame rails into the pockets on the seat fabric.

Affix the base strap, making sure the nose of the seat base is centered over the nose support. Attach and tighten the back straps.



**Fig.2**

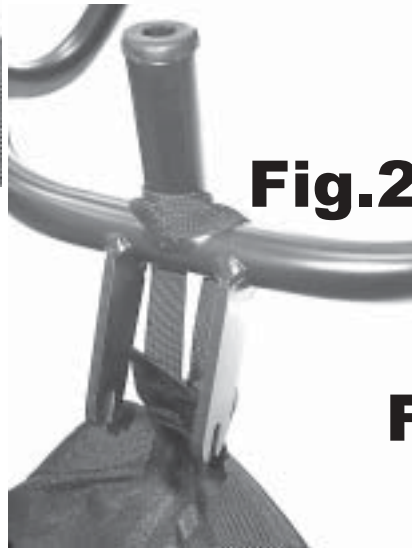

**Fig.3**



**Fabric Pocket**



**Fig.4**



**Advanced Transportation Products, Inc.**

**Toll Free: 877-433-4273 Phone: 425-673-2448 Fax: 673-**

**4668**

**E-Mail: [Info@visionbikes.com](mailto:Info@visionbikes.com) Web: <http://www.visionbikes.com>**



**Back Straps**

**Base Strap**

